PNx High Peak Power Powerchip Series

Key features

- Peak power up to 200kW
- Pulse width down to 350ps
- 1064nm, 532nm, 355nm and 266nm
- Single shot to 1000Hz
- Synchronization output
- All-in-one package



teem photonics™

Teem Photonics' PowerChip series are ultra-high peak power passively Q-switched MicroChip lasers producing hundreds of picoseconds and several tens of micro-joules pulses at kilohertz repetition rates with excellent beam quality. Furthermore, the PowerChip is a completely integrated platform which includes the laser head, power supply and air cooling in a compact, rugged, turnkey package.

Applications

- Materials processing
 - o Inscribing glass
 - Via drilling printed circuit boards
 - o Micromachining
- MALDI-TOF
- Microdissection
- Laser Induced Fluorescence (LIF)
- Time Resolved Fluorescence
- Laser Induced Breakdown Spectroscopy (LIBS)
- Light Detection and Ranging (LIDAR)

teem photonics™

Technical specifications:

	PNP-M08010 -1x0	PNG-M02010 -1x0	PNG-M04005 -1x0	PNV-M02510 -1x0	PNU-M01510 -1x0 ⁽⁶⁾
Wavelength	1064nm	532nm	532nm	355nm	266nm
Max Repetition Rate RR _{max} ⁽¹⁾	1000Hz	1000Hz	500Hz	1000Hz	1000Hz
Constant Pulse width range (FWHM)	<500ps	<400ps	<400ps	< 350ps	<350ps
Output energy	>80µJ	>20µJ	>35µJ	> 25µJ	>12µJ
Peak Power	>160kW	>50kW	>80kW	> 60kW	>35kW
Short term (1min) pulse to pulse stability 1o	≤ 1 %	≤ 3 %	≤ 3 %	≤ 3 %	≤ 3 %
Long term (1h) output power stability ⁽²⁾	± 3%	± 3%	± 3%	± 5%	± 5%
Beam profile	Gaussian TEM00	Gaussian TEM00	Gaussian TEM00	Gaussian TEM00	See note (5)
Beam divergence (Full@1/e ²) Horizontal Vertical	2.0±0.5mrad 2.0±0.5mrad	2.0±0.5mrad 2.0±0.5mrad	5.0±1mrad 4.0±1mrad	3.3±0.5mrad 3.0±0.5mrad	<0.9mrad <0.9mrad
M² ⁽³⁾	<1.3	<1.3	<1.3	<1.3	<1.4
Beam ellipticity ⁽⁴⁾	<1.3	<1.3	<1.3	<1.3	-
Polarization	> 20 dB	> 20 dB	> 20 dB	> 20 dB	> 20 dB

Notes		
(1)	See options p3	
(2)	For temperature variation <±3°C and <3°C/hour	
(3)	Mean average value M = $\sqrt{(XY)}$, X and Y being respectively the major and minor axis of the ellipse	
(4)	Beam ellipticity is calculated as the ratio of the main axis far-field divergence.	
(5)	Beam exhibits different profile in horizontal (Gaussian) and vertical ((sin x /x) ² in far-field) plans	
(6)	Contact factory for availability	
_ (7)	More compact separated leaser head and electronics package may be available upon request – Contact factory for further details	

ll information contained herein is believed to be accurate and is subject to change without notice. Teem Photonics may not be held able for its use. Teem Photonics, its subsidiaries and affiliates, reserve the right to modify or withdraw, at any time and without any photoe, specifications, product design, product component. Some options may not be available for all products. Please contact Teem Photonics for details. November 13 PNx series - Page 2 of 5 www.teemphotonics.com For your application, find your pulsed laser solution

teemphotonics™

Complementary information & options:

Environment parameters			
Operating Temperature	20-35 °C		
Maximum Power Consumption	<75 W		
Storage Temperature	0-50 °C		
Shock of 11ms according to IEC 68-2- 27, non operating	25 g		
Vibration 5Hz to 500Hz sinusoidal according to IEC 68-2-6, non operating	2 g		

Certification			
Laser Classification according to IEC 60825-1:2007	Class 3B Except PNU : Class 4		
CDRH	Yes if used with PCR-240500-100 power supply		
ROHs	Yes		


Package		
Laser Head dimensions, LxWxH ⁽⁷⁾	311x100x149 mm	
Laser Head weight	5 kgs	
PCR-240500-100 AC/DC converter dimensions, LxWxH	315x262x77 mm	
PCR-240500-100 AC/DC converter weight	1.5 kgs	

Options		
Fixed Repetition Rate = RR _{max}	-100 version	
Fixed Repetition Rate \neq RR _{max}	-110 version ; RR to be chosen over $10Hz$ -RR _{max}	
External Variable Repetition Rate	-120 version ; single shot to RR_{max} , 1 optimized RR value	
External Variable Multi-Repetition Rate	-130 version ; single shot to RR_{max} , 3 optimized RR values	

Il information contained herein is believed to be accurate and is subject to change without notice. Teem Photonics may not be held able for its use. Teem Photonics, its subsidiaries and affiliates, reserve the right to modify or withdraw, at any time and without any otice, specifications, product design, product component. Some options may not be available for all products. Please contact Teem Photonics for details. November 13 PNx series - Page 3 of 5 www.teemphotonics.com For your application, find your pulsed laser solution

teemphotonics™

Mechanical Drawings : CDRH Laser Head

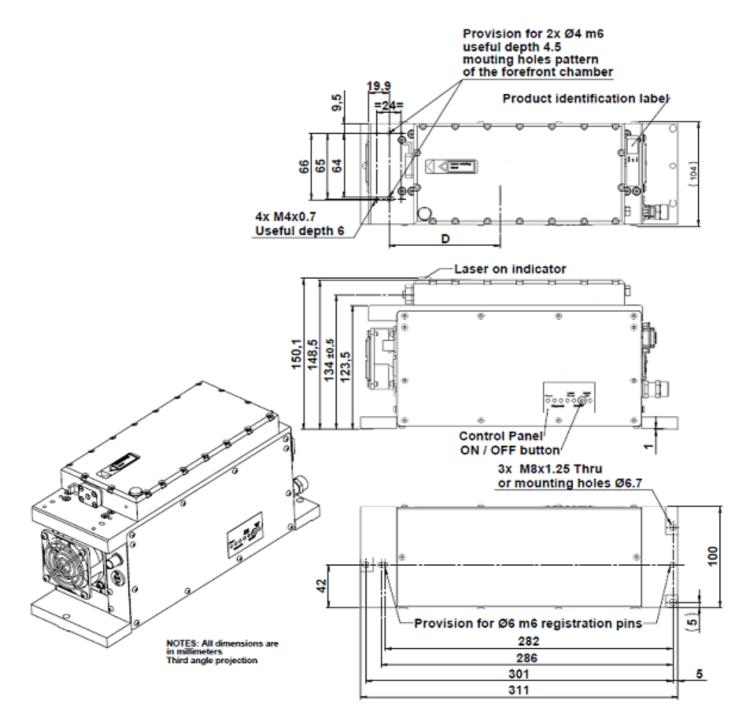

teem photonics™

<u>Mechanical Drawings : PCR-240500-100 (CDRH compliant AC/DC converter)</u>

